

IpcO Studio 3000 Controller Manual

Multi Program Multi-stage
Degrees Per Hour
Ramp Rate Controller with Soak



NOTE: Please read instructions before using your kiln.
Failure to do so may result in damage to the kiln and it's contents.

CONTENTS

SECTION 1 - Getting to know your Controller	3
SECTION 2 – Programming your Controller	3
2.0 Turning the Kiln On	3
2.2 Selecting the Pattern to run or enter	4
2.3 Running a Pattern	8

SECTION 1 - Getting to know your Controller

The Ipco 3000 Digital Temperature controller is designed to allow automatic firing with Multiple stages and a soak at the top.

This manual is to be used as a supplement to the original Ipco manual included at the end of this document.

The Controller has a primary digital readout with indicative lights to show if you are setting Temp (Deg C), Ramp (Deg C/Hr) or Soak (Hr Min)

There are 4 buttons (Program ☒ a square with a diagonal through it (I'll use this tick box to represent it) a ➡ Right arrow which I'll refer to as the Enter Key and an up ⬆ and down key. ⬇

There is also the On/Off button adjacent to the digital read out.

We also have a series of lights that form a Hill that represent the stage of the program the program or step related to. In the Ipco manual this is referred to as the "Mimic" but I'll refer to it as the "Hill".

SECTION 2 – Programming your Controller

2.0 Turning the Kiln On

- I. Turn power ON at the power point (if not already hardwired).
- II. Turn the On/Off Button adjacent to the digital read out.

NOTE: Before you begin please check if there are any **lights are lit in the Hill** / Mimic. If there are any lights lit, you first need to **press the Program button** ☒ to clear any patterns that are running. If you don't clear this first anything you do subsequently will not have any affect and you may thus run the wrong pattern and have failures.



You must first clear any patterns that are running (lights on the Hill) before you proceed

2.2 Selecting the Pattern to run or enter

To begin you need to select a Pattern to run. Press the program button ☒ and then use the up or down key to cycle through the patterns Pn.1, Pn.2, etc. Use the Enter Key \Rightarrow to select the pattern.



Once the Enter has been entered you'll see some lights light up on the Hill. This shows you what step you are entering. The first stage is a delay start indicated by the lights on the flat at the beginning. You'll also see that the Hr min light is one next to the digital display. Delay is set in Hrs:Mins. Set it to 0.00 for no delay ie begin as soon as you run the pattern.




Press the Enter Key \Rightarrow to confirm you entry ie 0.00

Next we set the first stage ramp rate. This is shown by the lights heading up the hill. Please enter the Ramp rate in Deg C per Hour. Note the light next to the digital read out is C/hr. In this example it is set to a very slow rate of 40C /hr.



Press the Enter key ➡ to confirm the entry of 40.

Next we set the Temp in Deg C we want that step to finish at. 400C in this example.

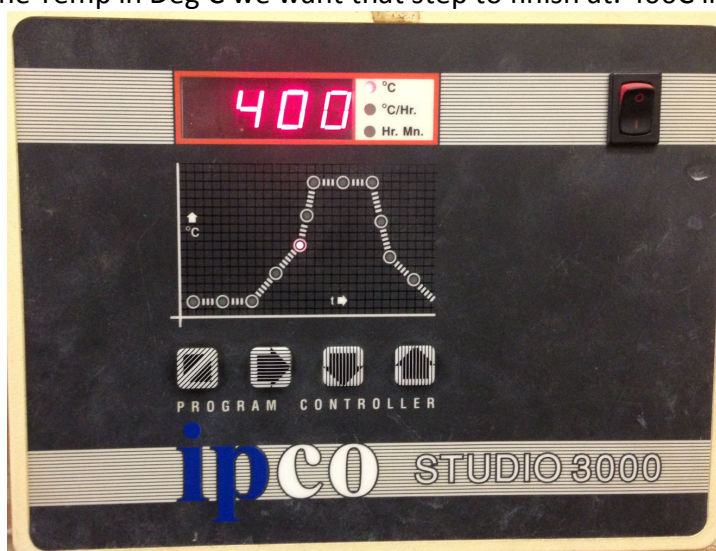

Press the Enter key ➡ to confirm the entry of 400C.

Next we have the ramp rate for the 2nd stage of the pattern. In this example we are setting it at 150C/hr.




Press the Enter key ➡ to confirm this entry of 150C per hour.

Now we set the top temp for the second stage in this examples 100C.



Press the Enter Key ↵ to confirm this entry of 1000C.

Next we set the Soak time for the Kiln once it reaches this max temp. This is set in Hours.Mins. In this examples is 0.00 but we'd suggest a 10-15min soak for bisque firings and a longer 30mins soak for glazes. This Soak time allows the kilns temp to even out over the chamber and to penetrate the ware. In the case of glazes it allows them to mature and become glossy.

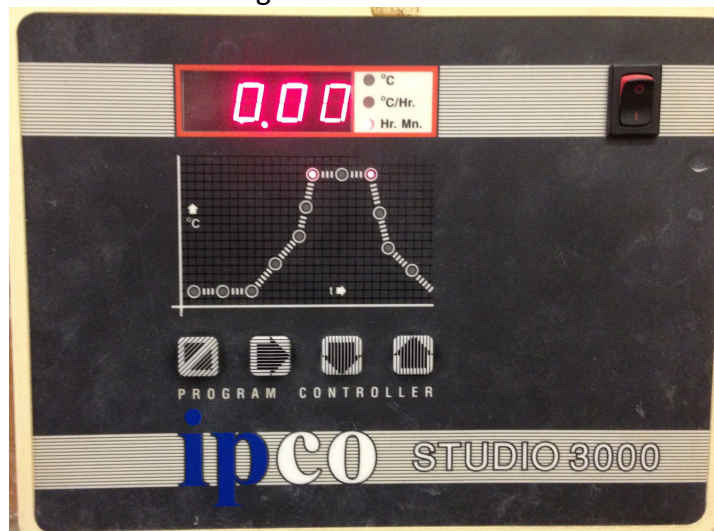


Press the Enter Key ↵ to confirm this entry of 0.00

For this next stage there is an optional cool down step. For 90% of firings this can be skipped so you use the up and down Key till PASS is shown. If you wish to set a cool down rate please be aware that it must be significantly less than the natural cool rate of the kiln for it to work properly.

For a fuller explanation please read the original manual at the end of this document.



Press the Enter Key ↵ to confirm the entry of PASS.
 The final stage we enter END to tell the controller to finish here.

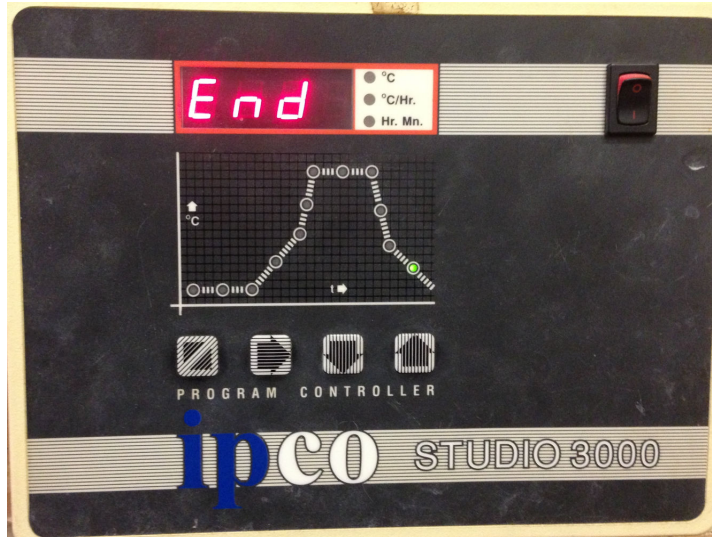

Once this is done the kiln will again show the Pn1 display.

2.3 Running a Pattern.

To Run the selected Program press the Program Key ☒



You should now see a green light on the hill and the display will show the temperature currently in the Kiln as it rises. Once the Kiln has reached its top temp and countdown timer of the soak time will display.



As this is an old controller we don't have a fully detailed instruction manual. Please read the following manual from the Controller manufacturer for more detail.

Also note that the versions used in Woodrow kilns don't allow program linking.



STUDIO 3000

OPERATING INSTRUCTIONS

MANUFACTURED
IN THE UK

The Studio 3000 is a combined Programmer and Temperature Controller which has been specifically designed for use with pottery kilns. Control of the entire firing cycle is fully automatic, to provide simply set, accurate and repeatable firings. The creation and progress of a firing program can be easily followed using the Mimic Display.

PLEASE READ THIS

This manual describes all aspects of the use of your STUDIO 3000 controller. It is split into three sections. Page one should be read by all users as it covers important SAFETY information. If you are a non technical user you are advised to fully read pages two and three which give a pictorial view of the basic use of the controller. If you are an experienced user you should find all the information you need under the headings shown below in the contents list. If after all this you have problems then the fault finding section should be referred to.

CONTENTS

TOPIC	Page	TOPIC	Page
Installation	1	Event Relay	5
Quick Guide.....	2 + 3	3 Zone Control.....	6
At Switch ON	4	Electrical Connections.....	7
During the firing.....	4	Option Wiring.....	8
Security Lock.....	5	Configuration.....	9
Gas Relay.....	5	Fault Finding	10
Alarm Relay.....	5	Specifications.....	11

Installation

Mounting The controller should be mounted on a flat vertical surface away from the kiln, so that it cannot be affected by the heat that will radiate during the firing of the kiln. A removable bracket at the rear of the controller is used for fixing. Slide the mounting bracket from the rear of the controller and fix using two No 8 countersunk screws.

Connection **It is vital that all electrical installation is carried out in a professional manner. We do not recommend DIY installation of this product. Before using the controller ensure the ‘Sensor Type’ (Shown on the rear of the controller), and the thermocouple in the kiln are the same.** In most instances the controller will either have a plug which matches your kiln, or will be connected by your supplier. If a plug is fitted check that the pin layout of the plug and socket are an exact match before plugging in. If in doubt contact your kiln supplier

Safety **It is strongly recommended that where a kiln is to be fired unattended that an additional totally independent over temperature safety system is fitted.** Ensure there is no risk of water entering the controller or its connecting leads. If you have not bought the kiln & controller as a package be sure you have read and followed EVERY part of this manual.


Declaration This Equipment conforms to European Standards for Electrical Interference EN50081-1 and EN50082-2 when installed as described in this manual. (See “Electrical Connections”) Compliance Dated 1st December 1995

Problems In the unlikely event that your controller does not perform correctly :- Please first refer to the “Fault Finding” Section. Check, or get someone else to check, that your firing sequence has been correctly entered. Contact your supplier in the first instance, since they should have knowledge of your installation which we may not be aware of. When contacting us please check the initial display of the instrument (See “At switch on”)

The Quick Guide (Part 1)

The controls and ‘Running’ a program.

This will normally show the kiln temperature in °C.

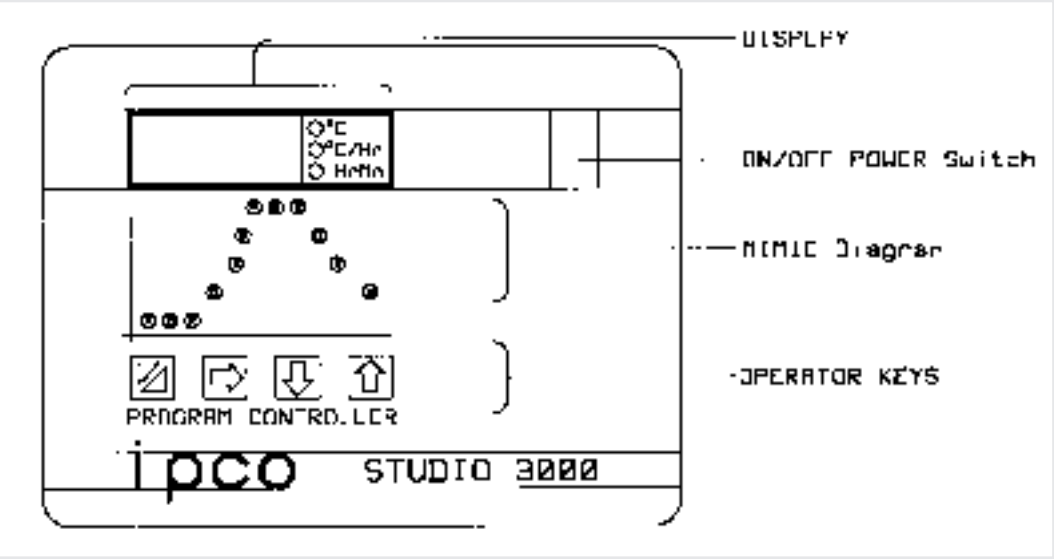



Display When entering or amending a program other information will be displayed. The three LED’s to the right of the display show the units of the information being displayed.

On/Off Switch This switches power to the controller.

Mimic Diagram When a program is running the progress through the firing cycle is indicated by the green LED’s in the centre of each segment. When entering or viewing the stored program the red LED’s indicate which part of the cycle is being displayed.

Operator Keys These are used to Stop or Start a firing cycle and to change the stored values.

TO RUN A PROGRAM

Switch On (Or plug in) the kiln.
Switch On the controller. (The Display should light up and after a while show the current temperature.)
Check the mimic has no lights lit. (If there are Press  the key to clear them.)
Press the → key to display the program number.
Press either the ↑ or ↓ key to change the program number if required.
Press the  key to run the program.

On all but the single program version of the Studio 3000, ten firing programs can be stored in the controllers memory. For ease of use the Controller pre-set programs can be used or modified to suit your requirements.

Settings for Studio 3000 MP & MPL Controllers											
Program Type		Slow Biscuit	Normal Biscuit	High Biscuit	Stoneware	Porcelain Temp Glaze	Low Temp Glaze	Med Temp Glaze	High	Lustre	Enamel
Program Number	-	Pn.01	Pn.02	Pn.03	Pn.04	Pn.05	Pn.06	Pn.07	Pn.08	Pn.09	Pn.10
Delay	Hr-Min	0	0	0	0	0	0	0	0	0	0
Ramp 1 Rate	°C/Hr	50	100	100	100	100	150	150	150	Pass	Pass
Ramp 1 Temperature	°C	200	600	600	200	200	500	500	500	-	-
Ramp 2 Rate	°C/Hr	250	250	250	250	150	250	250	250	125	120
Soak Temperature	°C	1,020	1,020	1,160	1,260	1,290	960	1,070	1,120	750	800
Soak Time	Hr-Min	0	0-10	0	0-10	0	0-10	0	0	0	0
Ramp 3 Rate	°C/Hr	Pass	Pass	Pass	Pass	Pass	Pass	Pass	Pass	Pass	Pass

The Quick Guide (Part 2)
Viewing or Modifying a firing Cycle

N.B. These instructions assume that you are using the controller for the first time. If the controller has been used then values other than those illustrated may be displayed.
Switch ON the controller - Ensure no LED's are lit on the Mimic - Follow the sequence shown below.

----- Press → to access the stored firing values.

PROGRAM NUMBER

- ↑ To Increase Prog Number.
- ↓ To Decrease Prog Number.



----- Press → to proceed

DELAY TIME


- ↑ To Increase Delay Time.
- ↓ To Decrease Delay Time.



----- Press → to proceed

RAMP RATE


- ↑ To Increase Ramp Rate
- ↓ To Decrease Ramp Rate

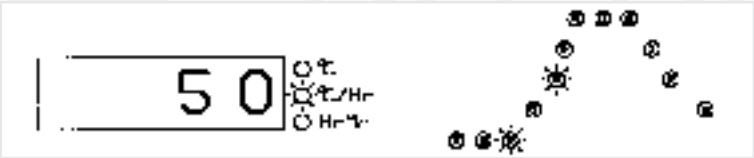

----- Press → to proceed

RAMP END TEMPERATURE

- ↑ To Increase Temperature
- ↓ To Decrease Temperature.

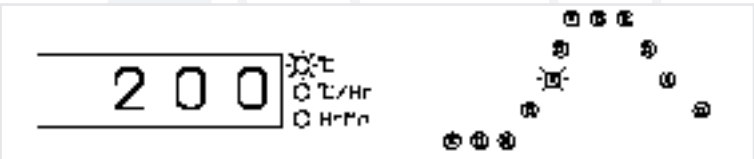

----- Press → to proceed

RAMP RATE

- ↑ To Increase Ramp Rate.
- ↓ To Decrease Ramp Rate.



----- Press → to proceed

‘SOAK’ TEMPERATURE

- ↑ To Increase Temperature.
- ↓ To Decrease Temperature.



----- Press → to proceed

‘SOAK’ TIME

- ↑ To Increase Time.
- ↓ To Decrease Time.



----- Press → to proceed

RAMP RATE

- ↑ To Increase Ramp Rate
- ↓ To Decrease Ramp Rate.



----- Press → to proceed

END / LINKING / RELAY

See “Program Entry” for a detailed description of the linking feature
See “Auxiliary Relay 2 for a detailed description of the auxiliary relay.

Otherwise:-

----- Press → to End program entry.



At Switch ON

The initial display when you switch ON gives useful information about your controller.
The display is in the form **X N¹.N².N³** where X is a letter and N are numbers.
X is the thermocouple type r, S, n, or k
N¹.N² is the software version (It should be quoted if you contact us with a technical query)
N³ is the model type of your controller;-
1 = Single Program. (ST3SP)
2 = Multi Program. (ST3MP)
3 = Multi Program with linking. (ST3MPL)
4 = MPL with optional event relay (ST3E)
5 = 3 Zone control. (ST3Z)

Program Entry

The ‘Quick Guide’ should be used as a first approach to entering programs. The following gives specific detail not covered by the guide and assumes you are familiar with the general operation of the controller.

RAMPS

All ramps may be Up or Down.. The controller decides automatically which way to ramp depending upon the values you enter into the program. When you start a program the start temperature for a ramp is the current kiln temperature.
To omit a ramp segment from a firing cycle, decrement the ramp rate below zero until ‘PASS’ is displayed. (You cannot ‘PASS’ Ramp 2 since this would also remove the subsequent Soak)
To jump immediately to the next segment, increment the ramp rate above 1000°C/Hr until ‘FULL’ is displayed. During a firing this will immediately load the ramp end setpoint and then wait until the kiln catches up before proceeding with the next segment.


SOAK

You may Soak for up to 99 Hr 59 Min. Selecting zero for a soak time will give what is called a “Cut-Off” firing, where the kiln rises to the desired soak temperature but does not hold at this temperature.

LINKING (Not applicable to SP and MP models)

At the point of the program entry where ‘End’ is displayed, you may link to another program if a more complex firing cycle is required. Whilst ‘End’ is displayed in program entry press and hold the secret key under the ‘P’ of IPCO. The ↑ / ↓ keys allow a Ln number to be displayed. When the program is run this link number will direct the controller to continue firing with the values in the ‘linked’ program. You may make as many links as you wish, however, each link uses up one of your ten programs which are thus not available to be run independently. Also be very careful that you do not link back to a program which is earlier in your current firing cycle, or a continuous loop will result.

During The Firing

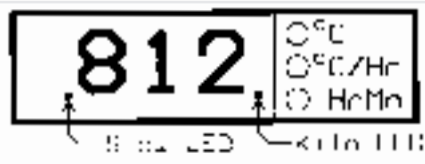

The display will normally show the temperature in the kiln.
The kiln LED is lit when power is being applied to the kiln.
The Slow LED (Flashing) is lit if the kiln is too slow to follow the program. Whilst a program is running (i.e.. One of the green LED's will be lit) a number of other features are available;-

MONITORING FIRING PROGRESS

The ↓ key may be used to examine additional values held within the controller. What is displayed will depend upon the position in the program and the model version. For the SP, MP and MPL versions the values shown are ;-
(Flashing °C LED indicates ‘Monitoring’ operation)
RAMP;- Prog No, Current setpoint.
SOAK;- Prog No, Current setpoint, Remaining soak time.

For the Three Zone unit the above value are followed by Zone 2, & Zone 3 current temperatures.

REVIEW PROGRAM

The → key will allow you to step through all the current program values and amend them as required. These amendments will normally have immediate effect upon the firing.

JUMP TO NEXT SEGMENT

Pressing the È key will advance the program one segment.
If the next segment is a ramp the start temperature will be the actual temperature at which the button was pressed. The rate of rise (or fall) and the end temperature are as defined in the program. If the next segment is a soak the controller will immediately apply the soak temperature as the setpoint and wait for the kiln to catch up.

Security Lock (Not fitted on single program version)
Access codes can be entered, amended, or if security is not required can be omitted.

SET LOCK NUMBER
Ensure no LED’s are lit on the mimic display.
Press and hold down the switch hidden under the “P” of IPco for 10 seconds.
The display will initially show ‘Lock’.
After 10 seconds the display will show the current lock number.
Use ↑ / ↓ keys to set a code. (range = 00 to 99. note;- 00 is No Lock)
Once the hidden switch is released, the code number will be stored.

‘LOCKED’ OPERATION
With a Lock number set, any attempt to Stop / Start / Modify the program will display the message ‘Lock’.
To continue at this point with the selected operation ;-
Press and hold down the switch hidden under the “P” of IPco
Ln 00 is displayed.
Use ↑ / ↓ keys to select the code that you have already set.
Release the secret key and the desired function will occur.

Gas Relay (Option)
No parameters are required for this option. The relay turns ON at the first instance of heat demand by the controller. It turns OFF at the ‘End’ of a firing cycle or if an Error is detected.
See also Electrical Connections. See also “Option wiring”

Alarm Relay (Option)
No parameters are required for this option The relay turns ON when the controller is switched ON. It turns OFF if the kiln temperature exceeds the highest programmed setpoint by 20OC, or if an error is detected (See ‘Problems’). Where linked programs are used the alarm will initially be determined by the first program. As each additional program is linked to, then the alarm value will be determined by the highest setpoint encountered during the complete firing sequence. In a three zone controller, an over temperature in any zone will cause the alarm. See also “Option wiring”

Auxiliary Relay (Option)

After the last ramp, entry of parameters for the auxiliary relay is prompted by **r L y**
Use↑ / ↓ to select.

- r L - t** TEMPERATURE RELAY
- r L -E** EVENT (Segment) RELAY
- r L y** NO OPERATION

----- Press → to proceed

The first segment to be programmed will be indicated by a Red LED. Each press of the → key will advance you to the next segment. Green LED’s show you where operation of the relay will occur.

N.B. You MUST ensure that the temperatures and segments that you program for the auxiliary relay will occur during your program. No Validation is performed.

EVENT MODE - (Having selected **r L -E** EVENT (Segment) RELAY)
You may program the relay to operate for any combination of the segments.
i.e. Delay, Ramp 1, Ramp 2, Soak, Ramp 3, End.
Use ↑ / ↓ to select whether you want the relay ON (Green LED lit) , or OFF (Green LED off) in this segment.

----- Press → to proceed

Step through each segment and repeat above for each segment.

TEMPERATURE MODE - (Having selected **r L - t** TEMPERATURE RELAY)
You may program one ON operation at a your specified temperature and one OFF operation at a further specified temperature. These two operations must be in different segments. If a duplicate action is attempted, the previously set action will be cancelled. Operations can only be entered in Ramp segments. These must be ramps that will cause the kiln to pass through the programmed temperature. When the controller first starts the relay will be OFF. This means that the first operation should be an ON (Even if in terms of your process something is turned Off!)

----- Press → to proceed

The Red LED’s on the mimic will show the segment selected
A Green LED shows an operation is programmed into this segment.
The display indicates whether an operation is an ON or an OFF.

Use ↑ / ↓ to select or remove an operation.

↓ Selects (or removes) an ON operation
↑ Selects (or removes) an OFF operation

NB. If the segment has ‘PASS’ as a parameter then the above actions are inhibited.
Having Selected an operation (i.e. Green LED lit.)
Press and hold the secret key to display the temperature at which the operation occurs.

Use ↑ / ↓ to adjust the switching temperature.

Release the secret key to accept the value.

----- Press → to proceed

Repeat the above step for each segment.

Two / Three Zone Control (Please also refer to “Option wiring”).)

For a full three zone control the kiln requires three thermocouples and three contactors driving the heating elements of three separate zones. The thermocouples are situated in each of the heating zones so as to monitor the temperature in that zone.


We recommend the use of type N mineral insulated thermocouples in three zone kilns. These ensure leakage currents from the elements will not effect the operation of the thermocouples and / or the controller.

Full three term (PID) control is available on all three zones. As shipped the Integral and Derivative terms are turned off for the slave zones. This reduces the risk of the slaves influencing the main zone. (See also “Configuration”)

Refining the control
Where a consistent difference exists between zones during a firing then use the offset (See “Configuration”) to enter a value numerically opposite that being achieved. e.g.. If zone 2 is always 3OC above the main zone, then enter ‘-3’ in the offset for zone 2.

Where the difference varies over the temperature range or between various loads then reduce the value of ‘Proportional Band (See “Configuration”) for each of the offending zones.

Electrical Connections

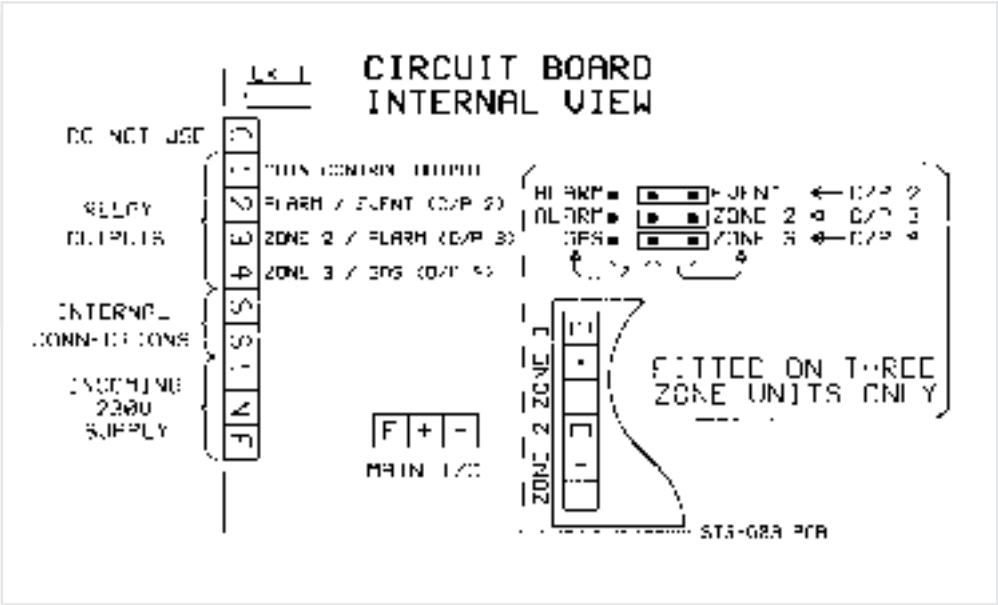

Please Note
The Industrial Pyrometer Co do not supply specific wiring diagrams for individual kilns since the accuracy of such information cannot be confirmed.

Incoming Supply

This should be connected to a 230V supply via a fuse of 1A rating. An Earth connection is essential.

Thermocouple Inputs

Ensure that the Studio 3000 Controller and the Thermocouple are of the same type, otherwise accurate control of temperature in the Kiln will not be possible. The letter prefix on the Serial Number Label (N, K, R or S) will indicate the thermocouple type that has been programmed into your Controller.

All input wiring should use screened cable of the appropriate compensating type, with correct polarity maintained throughout.

See also ‘At switch On’ for explanation of the initial identification message.
‘Parameter Setting’ to change the instrument thermocouple type.


Control Outputs

NB ALL outputs are low current and MUST drive remote relays or contactors which in turn drive the load.
The ‘C’ (Common) terminal is internally connected to 230V via the ON/OFF switch.
To isolate the relays from this 230V feed remove link LK1 The maximum switching voltage is still 230V.

MAIN OUTPUT (Relay 1) This output feeds the kiln contactor coil
OPTIONS (Relays 2 to 4) See following page for Option output information.

EMC

To comply with current EMC regulations, the system, of which this controller is a part, must conform to the relevant standards for electrical emissions. It is the responsibility of the end supplier to ensure this is achieved.

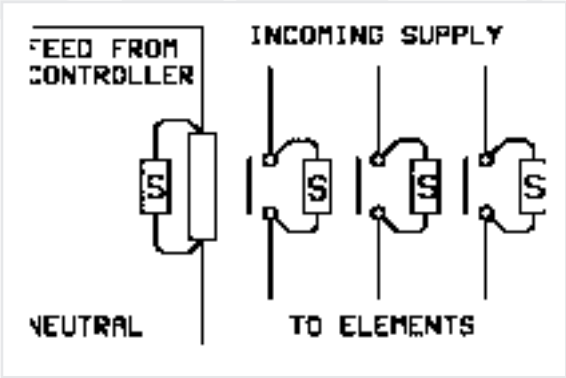

The following is our recommendation only.
The control contactor(s) should be fitted with suppressers at all terminals which are switching the load.
(This means that they cannot be relied upon for safety isolation)
The coil should be fitted with a suppressers.
S = Suppression Device
e.g. Farnell 218-913
R.S. 210-364,210-370

Where slave relays are used these should also be suppressed.
Do not fit suppressers to over temperature controllers, or safety isolation contactors.

Option Wiring

ALARM only	Output Relay 2 is fitted. The alarm is normally closed, going open circuit in the event of a fault. This output may be fitted to provide additional protection of the kiln. It principally guards against failure of the main contactor. It should not be seen as a direct replacement for an over temperature policeman.
EVENT only	Output Relay 2 is fitted. May be configured as a user programmable Event (e.g.. To operate a damper) (See also notes on programming under ‘Auxiliary Relay’) This will normally be used to either drive a motorised valve for damper control, or an external signalling device to initiate other parts of a control system. To drive a motorised valve an additional external (Customer Supplied) relay must be used. This should have N.O. and N.C. contacts to drive the ‘Open’ and ‘Close’ feeds on the valve.
ALARM + EVENT	Output Relays 2 & 3 are fitted. O/P 2 is the Event and O/P 3 is the Alarm.
GAS	O/P 4 is fitted (This may be in addition to any of the above.) This output may be fitted to provide ignition and shutdown of a gas fired kiln. The Burner should have an ignition control input (which is fed from the ‘Gas’ relay), and a High/Low fire control input (which is fed from the main control output.)
ZONE	All O/P Relays are fitted. Selection of functions is via link blocks. (See previous page)

For a three zone control only one output is available for alarm or event. The provision of both is thus not possible. **It is recommended that an entirely separate over temperature alarm be fitted in this instance.** This should be considered standard practice for an installation of the likely value of a three zone kiln.

2 Zone control may be implemented simply by not using the third zone. The unwanted zone must have its thermocouple input linked between +VE to -VE to prevent the controller causing an open circuit thermocouple. error message.

It is vital that the correct relationship between thermocouple and contactor is maintained, such that the thermocouple is measuring the temperature of the heater it is controlling. Failure to observe this may cause damage to the kiln.

The connections to a three zone kiln will be influenced by the design of the kiln, and no definitive connection information can be given. The following points may be of assistance.

- 1/ Where uniformity of temperature is the principal objective, then the main control output (Terminal 1) should drive the slowest zone in the kiln. Since the controller can only slow down the natural rate of rise of the kiln it is thus in the best position to keep the “slaves” in step with the “master”.
- 2/ Whilst the slaves are identical in function the display implies that zone 2 is above zone 3. Providing this orientation in practice will be less confusing to the user.
- 3/ Ensure that the thermocouples are positioned as far away from direct element heat as possible, and in the centre, or slightly below the centre of each heating zone.

Configuration

The controller operation may be modified to satisfy a variety of situations by amending the parameters. This information is given for completeness and should only be modified by experienced personnel.

To access these parameters first switch the controller OFF. Press and hold the secret key while switching the controller ON. Continue to hold the secret key until the first parameter below is shown. Release the secret key and continue as shown below.

Thermocouple type

tC.? Use ↑ / ↓ Keys to select. r,S,n,k
----- Press → to proceed

Setpoint Limit

SP-L Press secret key to display Default 1350°C
Use ↑ / ↓ to modify
----- Press → to proceed

Control Strategy (3 Zone Control ONLY)

Con.? Use ↑ / ↓ to modify 0 = Differential (Default)
1 = Absolute
NB In differential mode the slaves follow the measured value from the main zone.
In absolute mode the main and slaves all follow the controller setpoint.
----- Press → to proceed

Offset (zone 1 - see NB 1)

1. ?? Use ↑ / ↓ to modify Range = +99 to -99(°C). Default = 0
This value is added to the controller setpoint and thus allows trimming of the achieved temperature in the kiln. e.g. I-05 is entered when the controller is at 500°C Then this zone will be attempting to control at 495°C
----- Press → to proceed

Proportional Band (zone 1- see NB 1) These values are qualitative and do not relate to engineering units

P1.?? Use ↑ / ↓ to modify Range = 0 to 99 Default = 13
This defines the band over which the controller gives proportional control
A setting of zero gives ON/OFF control
A setting of one gives the narrowest control band (tightest control)
A setting of 99 gives the widest control band
----- Press → to proceed

Integral Time (zone 1- see NB 1) These values are qualitative and do not relate to engineering units

I1 ?? Use ↑ / ↓ to modify Range = 0 to 99 Default = 20
The integral time sets the rate of which the controller reduces any offset between desired (Setpoint) and measured temperature.
A setting of zero turns Integral action OFF
A setting of 99 gives the slowest response.
----- Press → to proceed

Derivative Time (zone 1- see NB 1) These values are qualitative and do not relate to engineering units

d1.?? Use ↑ / ↓ to modify Range = 0 to 99 Default = 90
The Derivative time sets the rate of reaction to a rapid change in measured value.
A value of 99 gives the slowest response
----- Press → to proceed
NB. 1 These parameters are then repeated for zones 2 + 3 (the slaves)
The Default values for Zones 2 + 3 Integral and Derivative are zero.

TO EXIT THIS FUNCTION PRESS 

NB, 2 Parameters are only stored when the → Key is pressed after making a change
If you change a parameter and then press  then this last item is not updated.

Problems

The following list covers the most commonly encountered questions asked by users and some possible causes.

There is no display on the controller

- 1 The ON/OFF switch on the controller (see fig 1) is in the OFF position.
- 2 The kiln is switched off at an Isolator .
- 3 A fuse has blown in the kiln or the supply which feeds the kiln.

The controller displays OPEN

- 1 The Thermocouple, or the wires between it and the controller, are damaged.
For a quick check;-
Switch OFF, Short + and - on the instrument T/C input, Switch ON. Display should show aprox 20°C.

The controller displays FAIL

- 1 The wiring to the thermocouple is reversed.

When I turn on the controller it starts to run a program immediately.

- 1 You have switched OFF the controller while a program was running. It is advisable to clear any lights on the mimic using the STOP / START button before you switch off .

When I attempt to run a program I cannot change the program number.

- 1 If any lights show on the mimic you have a program either running or being viewed , you must clear these lights before you can change program.
- 2 Pressing the STOP / START key will only run the current program. To change a program you must run the sequence shown in the “quick guide” .

The Kiln Under fires

- 1 If the controller ‘kiln’ light is on but kiln is not heating the fault is in the kiln or it’s wiring. Or;
You have an energy regulator on the kiln which is not at 100%. Or;-
The kiln has a faulty element. (See also ‘During the Firing’)
- 2 The thermocouple type does not match the instrument. (See “Electrical connections”)
- 3 Loose wires to the thermocouple (The display may be erratic.)

The Kiln Over fires

- 1 The thermocouple type does not match the instrument.
- 2 You have a sticking contactor in the kiln - Refer to an electrician
- 3 Loose wires to the thermocouple (The display may be erratic.)

When I attempt to enter a temperature in a program it will not go above a certain point.

- 1 A safety limit is available to prevent excessive temperatures being programmed. Check that this is correct for your application. (See “Configuration” to change this value)

The Damper does not operate at the end of a firing.

- 1 You must ensure that the values entered in a program cause the firing cycle to pass through the switching points entered into the relay temperature. If you do not the controller may have ended its program, and hence stopped any further actions, before the desired switching of the damper.

When I press a key the controller displays ‘Lock’

- 1 The security lock has been activated. You should refer to the ‘Security Lock’ instructions. Use the Set Lock Number’ instructions to determine , or change, the current lock number The ‘Locked Operation’ instructions define the way to operate the controller with this security active.

DISPLAY	MEANING
OPEN	Thermocouple open circuit.
FAIL	Thermocouple connection reversed.
Err3	Not in use.
Err4	Process temperature has exceeded higher program by 20]C
Err5	Error reading internal memory. Refer to supplier.
Err6	Error reading internal memory. Refer to supplier.

Specifications

Size	W - 220mm x H - 168mm x D - 80mm
Ambient	0 to 50°C maximum.
Supply	230V +/-15%
Thermocouple	Type R, S, K, or N. (See 'Configuration' for change information)
Outputs	Single pole 3 Amp contacts. All outputs give 230V output via internal link. (See 'Electrical Connections' if isolated switching is required)
Display	R or S -20°C to +1600°C, K or N 0 to 1300°C Accuracy +/-3°C over stated operational ambient.
Delay & Soak times	0 to 99 Hours 59 Minutes in one minute increments.
Ramp Rates	1 to 1000 °C per Hour., "PASS", or "FULL"
Setpoints	0 to maximum of display (This depends upon thermocouple type selected.) (will be limited by Setpoint limit - See below.)
Setpoint Limit	Adjustable over full display range.
Programs	10 (Except for single program version) Pre loaded for convenience but all user modifiable.
Linking	On models MP/L,MP/E & MP/Z.

Supplied By:-



27A Yeo Street, Victoria Point QLD 4165
PO BOX 5220, Victoria Point QLD 4165
Office Tel: 07 3820 7037
Mobile: 0427 105 456
thermaltechnologies.com.au
sales@thermaltechnologies.com.au
ABN: 11 358 865 293

Designed and manufactured by :-



The Industrial Pyrometer Co Ltd